



1600-1607a




1608-1619



1624a



1622

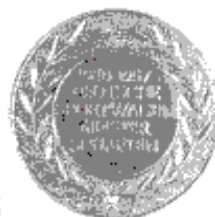

1623

1624



1625



 
1626



1627



1628



1629



1630



1631



1632



1633



1634




1701



1706



1702

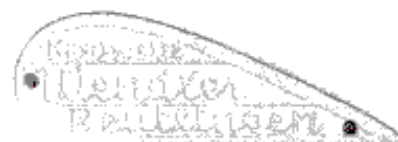

1707



1708



1703



1709



1704

 


1711




1705


1801



1812

 


1802

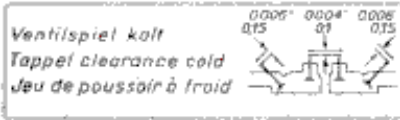

1813



 
1803



1814



 1804



1815



1805



1816



1806



1817



1807



1818



1808



1819



1809



Zu Beachten!
Nur schalten zwischen
40- km/h = 4. in den 3. Gang
40- km/h = 3. in den 2. Gang
0- km/h = 2. in den 1. Gang
Schaltung immer ganz durch
ziehen. Gang ganz einlegen.

1810




1821

Einfahrvorschrift
Höchstgeschwindigkeiten

	100	2	3	4
bei 500 km	20	35	60	90
bei 1000 km	15	45	80	100

1820

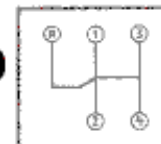

1811

